

KD-AVX20*11	Play/Search Mode	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
KD-AVX40*11	Search Mode	(with KS-PD100)	(with KS-PD100)	(with KS-PD100)	(with KS-PD100)	(with KS-PD100)	(with KS-PD100)	(with KS-PD100)															
KD-AVX55	Smart Head/iPod Mode	-	-	-	-	-	-	-	✓*3*13*16	✓*3*13*16	✓*3*13*16	✓11	✓11	✓11	✓11	✓11	✓11	✓11	✓11	✓11	✓11	✓11	✓11
KW-AVX72DT	Artwork on Video Out	-	-	-	-	-	-	-	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
KD-AVX77	Video Browsing on Video Out	-	-	-	-	-	-	-	✓*3*5*17	✓*3*5*17	-	✓*3*5*17	✓*3*5*17	✓*3*5*17	✓*5*10*17	✓*3*5*17	✓*3*5*17	✓*3*5*17	✓*3*5*17	✓*3*5*17	✓*5*10*17	✓*5*10*17	✓*3*5*17
KW-AVX720	Charge	-	-	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
KW-AVX724	Play/Search Mode	-	-	-	-	-	-	-	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
KW-AVX725	Smart Head/iPod Mode	-	-	-	-	-	-	-	*13	*13	*13	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
KW-AVX726	Artwork on Built-in Monitor	-	-	-	-	-	-	-	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
KW-AVX728	Video Browsing on Video Monitor	-	-	-	-	-	-	-	✓*2	✓*2	-	✓*2	✓*2	✓*2*19	✓*9*19	✓*2	✓*2	✓*2	✓*2*19	✓*9*19	✓*9*19	✓*9*19	✓*2
KW-ADV792	Charge	-	-	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
KW-AVX820	Play/Search Mode	-	-	-	-	-	-	-	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
KW-AVX824	Smart Head/iPod Mode	-	-	-	-	-	-	-	*13	*13	*13	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
KW-AVX825	Artwork on Built-in Monitor	-	-	-	-	-	-	-	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
KW-AVX826	Video Browsing on Video Monitor	-	-	-	-	-	-	-	✓*2	✓*2	-	✓*2	✓*2	✓*2*19	✓*9*19	✓*2	✓*2	✓*2	✓*2*19	✓*9*19	✓*9*19	✓*9*19	✓*2
	Charge	-	-	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓

[To identify iPod models, please check Apple Inc. web site](#)

:Available

-:Not covered under warranty

*1:The iPod adapter has the possibility of hanging up while using iPod nano 2nd generation.

*2:To realizethis function, special cable(KS-U19 or KS-U29) is necessary.

*3:To realizethis function, special cable(KS-U20 or KS-U30) is necessary.

*4:To connect iPod directly, KS-U18 is necessary for KD-PDR41and KD-G647.

*5:At Video Browsing mode, "Movies","TV Shows","Video Podcasts","Music Videos","Video Playlists" is suppoerted. "Rented Movies" is not supported.

*6:Setting of Shuffle mode of iPod becomes Off just after connected with the following models.

*7: While playing back the iPod touch connected, sounds may sometimes jump or be interrupted. It may happen

[*8:These models do not have the function to charge new iPod. If you want to charge new iPod by these models.](#)

*9:To realizethis function, special cable KS-U29 is necessary.

*10:To realizethis function, special cable KS-U30 is necessary.

*11: KD-AVX20 and KD-AVX40 do not have Head/iPod Mode function. KD-AVX20 and KD-AVX40 have only Head Mode.

*12: KW-NT1 does not work with KS-PD100.

*13:Smart iPod Mode does not work on iPod 5G and iPod nano 1G via USB Audio.

*14: When Head/iPod mode is switched to iPod mode, iPod turns into the pause mode and does not play back until pushing the play button of iPod itself.

*15: To operate iPod smoothly, please set "iPod Artwork" to "off" on AV Menu - Setup - Disc Setup 1.

*16: To listen to the sound in "iPod Mode", please set "AV Input" to "iPod(Off)" on AV Menu - Setup - Input.

*17: To display the vide in iPod, please set "AV Input" to "iPod(Off)" on AV Menu - Setup - Input.

*18: It takes a time to start charging after connect ing.

*19:Video image may not be displayed on screen when iPod mode.

*20:There is no audio output when connected to OS3.0 iPod/iPhone.

Note: *Not compatible with iPod 1st + 2nd generation and iPod shuffle 1st + 2nd + 3rd generation because they have no dock connector.